

... from development to
implementation

Labor Tech[®]

Production of materials testing equipment and automation

Free fall drop weight testers series
DP.2 - DPFest up to 3000J VP

Made in Czech Republic



The logo for Labor Tech, featuring the words "Labor" and "Tech" in a bold, white, sans-serif font on a black rectangular background.

Production of materials testing
equipment and automation

Drop weight testers
series up to 3000 J VP
DP.2 DPfest
Free fall

... from development to
implementation

Basic description


The low-capacity drop weight testers LABORTECH are designed to test and evaluate the fracture surfaces of materials and products by falling weights. The test method is described as a drop weight tear test in the following standards: EN ISO 6603, ISO 7765-2, EN ISO 179-1/-2, ISO 18352, EN 6038, ASTM D3763, ASTM D5628, ASTM D7136M, ASTM D7192, ASTM D2444, Airbus AITM 1.0010, Boeing BSS 7260, DIN 65561.

Main advantages, functions, properties

- Robust vertical test frame with high stiffness, durability, good ergonomic design and maintenance-free operation.
- Modular system with various machine modifications.
- The unique combination of magnetic protection system in cooperation with ELHY electro-hydraulic equipment allows optimization of the striker bounce.
- Infinitely adjustable fall height with automatic lift by AC motor and inverter.
- Continuous checking of the correct weight of the impact weight.
- Effective shock absorbers for safe and reliable elimination of residual energy.
- Securing the working area with a safety girder with automatic unlocking during the test.
- Protective safety cover with electrical protection. High safety according to EN ISO 13849/2.
- Flexible, quick and easy adjustment of the support to the tested specimen including centering.
- The quick-change blade system ensures simple and convenient operation for the user in harsh industrial environments.
- Detection of operating errors and their display in the program.
- Preparation for use of various test supports and cutting edges.
- Integrated electric transport for collection of broken samples with efficiency up to 95% for further use (metallographic analysis etc.).

Machine control

- Centrally positioned controls for easy control and testing on the test system.
- Electronics and machine control integrated in the Rittal central enclosure, which is part of the machine with the DROTest-S-xxx safety software installed in the Simatic S7 safety PLC with electromechanical interlocking and the possibility of using individual modules.
- Touchscreen control with electronic display of fall height, decreasing energy, weight of fall and impact speed.

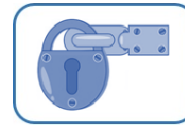

Security and Update Requirements

- LABORTECH high-impact machines, based on their design and structure, comply with the safety of the European Machinery Directive (89/392 / EEC and 91/368 / EEC - Machinery Safety).
- Certified TÜV safety circuit system with safety control and monitoring.
- High safety in accordance with EN ISO 13849-1/2
- All safety systems are double fused.
- Continuous inspection of safety guards and doors in accordance with new safety features.

Extension of machines

- The possibility of expanding the drop weight tester with **instrumentation** with force measurement and impact trajectory on Electronics with 4 MHz measurement speed, digital control and measuring unit SPEED and powerful DROTest – BASIS software with appropriate modules.
- Expansion of drop weight testers with **cooling systems** with maximum cooling temperature up to 90 °C.
- Expansion of machines with **robotic systems** with the possibility of autonomous control of the whole system without human intervention.

Features of software DROTest - BASIS

DROTest is an integral part of all vertical impact machines type LabTest DP supplied by LABORTECH. This software will help you increase the productivity and quality of testing in your test rooms and test laboratories. You can streamline, refine and accelerate your testing and customize your testing environment to make it easy for operators to measure the mechanical properties of materials by the free falling weight method, regardless of their skills. Below you will find basic features in several points:



- Software designed for falling weight test.
- Editable sample types and test standards including item's name modification.
- Graphical evidence of preparations for individual standards and work procedures.
- Digital display all of actual values.
- Storage of measured data into database with possibility of filtering according to definition, order, date etc.
- Extensive calibration mode as standard.
- Automatic cooling timing prior to testing EN ISO 148-1 and ASTM E23.
- Data transmission from temperature chamber, thermometer etc.
- Multilanguage versions (English, Polish, Russian etc.).
- Print the report in PDF format.
- Export data to CSV - BASIS, or to MY SQL and MS SQL
- Unlimited license.
- Installation on any computer without license, etc.

Warranty and post warranty service


- We guarantee warranty and post-warranty service for each of our drop weight tester supplied by us. **EXPERTISE, ACCURACY and SPEED** are our priorities.
- Each customer can choose: Standard Service, Service 24 or LABWEBservice 24.

Labor Tech

Production of materials testing equipment and automation


Drop weight testers series up to 3000 J VP
DP.2 DPFest
Free fall

... from development to implementation

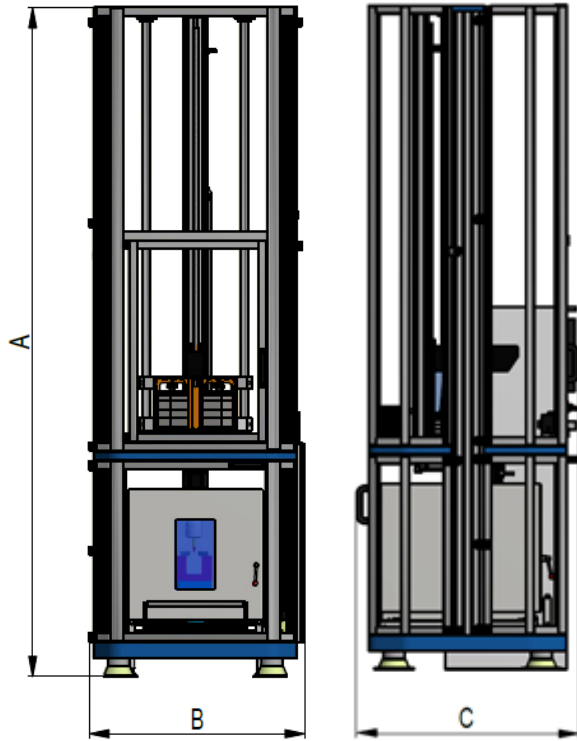

Technical data	Units	DPFest 200VP	DPFest 400VP	DPFest 600VP	DPFest 800VP	DPFest 1000VP	DPFest 2000VP
Energy range	J	0,3 - 294	0,3 - 405	0,3 - 588	0,3 - 757	2,5 - 882	2,5 - 1814
Impact speed	m/s	0,7 - 4,42	0,7 - 4,646	0,7 - 6,26	0,7 - 4,645	1 - 7,67	1 - 8,52
Fall height range	mm	25 - 1000	25 - 1100	25 - 2000	25 - 1100	25 - 3000	25 - 3700
Position accuracy	mm	0,5					
Dimensions for weights	kg	0,5 - 30	0,5 - 37,5	0,5 - 30	0,5 - 70	0,5 - 30	0,5 - 50
Accuracy weights classes	%	According to OIML					
Weight ¹	kg	362	396	414	498	498	616
Color finish	RAL	1015, 5015					
Dimensions							
Height of the Machine (A)	mm	2620	2620	3650	2650	4680	5650
Width of the Machine (B)	mm	800	800	800	800	800	900
Depth of the Machine (C)	mm	570	570	570	570	570	670
Environmental conditions							
Operating temperature	°C	10 to 35					
Storage temperature	°C	-35 to 55					
Working space humidity	%	< 90					
Noise level ²	dB	< 65					
Electrical connection							
Suply voltage	V	230... 240/50-60Hz					
Fuse	A	16					
Power rating (without accessories)	VA	820	820	820	1000	1000	2000

¹ Without accessories. ² Measured at distance of 1 m from the machine.

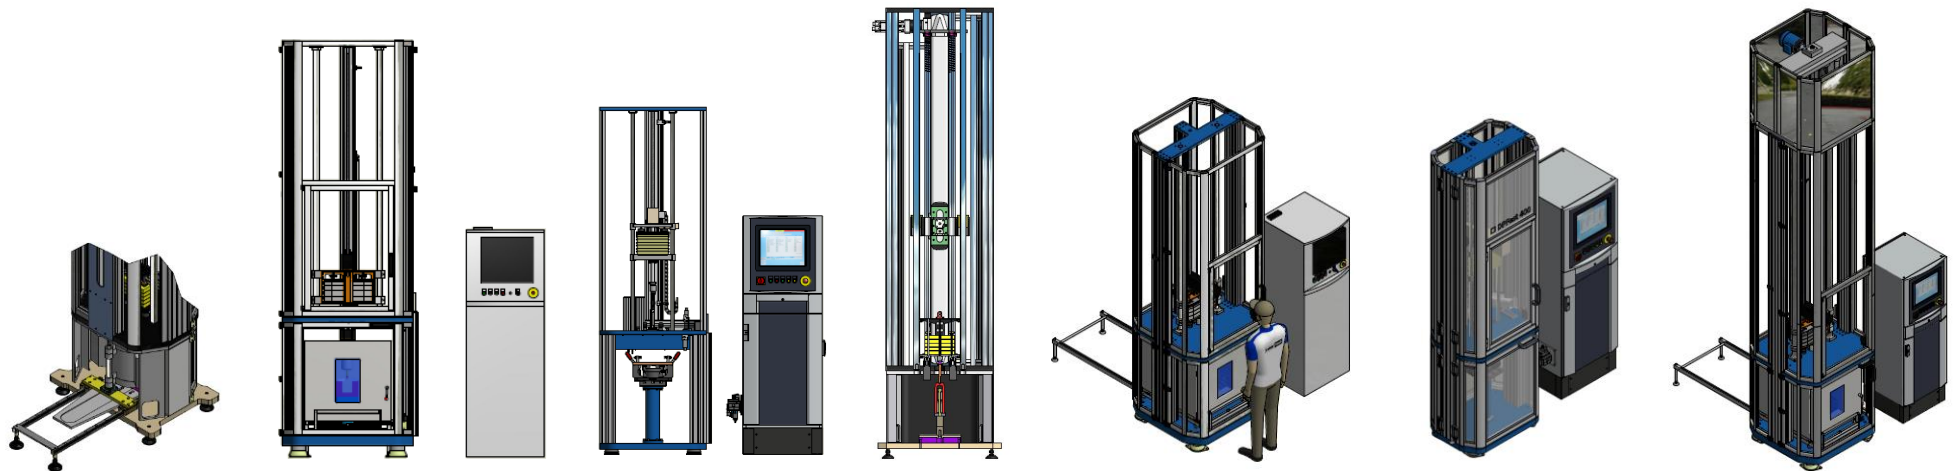

LABORTECH in the world



Contact:

LABORTECH s.r.o.

Rolnická 130a, 747 05 Opava, Czech Republic

Phone: +420 553 731 956, +420 553 668 648

E-mail: info@labortech.cz

Web: www.labortech.cz

GPS: 49°57'05.1"N

17°54'04.4"E

LABORTECH TRADING s.r.o.

Areál VVÚD Praha, Na Florenci 1686/9, 111 71 PRAHA 1, Czech Republic

Phone: +420 731 656 723, +420 724 020 052

E-mail: trading@labortech.cz

Web: www.labortech.eu

Labor Tech®

Production of materials testing
equipment and automation

LABORTECH in the
world

... from development to
implementation